


CAEBARDD
GUILDSFIELD
WELSHPOOL
POWYS
SY21 9DJ
TEL: 01938 500283
FAX: 01938 500261


MICK JONES
THE TIMBER SPECIALIST

CROSSHANDS SQUARE
SHOPPING CENTRE
PONTARDULAIS ROAD
CROSSHANDS
SA14 6NT
TEL: 01269 845364
FAX: 01269 843148

Ledge door kits

Diagram of ledge door

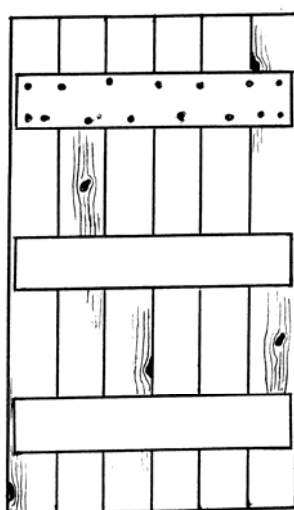

ASSEMBLY INSTRUCTIONS.

To assemble a door kit, please follow these instructions.....

Lay the tongue and grooved boards down on a bench, with pencil bead face down, inter-lock the boards together, and insert two or three packing strips of approximately 2mm thick along the length and between each of the boards. This is very important, so as to build in expansion joints to prevent warping within the boards should the doors take on moisture, push together to hand tight only.

Place the door backs on, square them up, mark them to size and cut them accordingly. Replace the backs and screw in place, remembering to counter sink the screw heads so that you can fit the wooden pellets, put a spot of glue on the pellets and hammer into place, when glue is dry shear off with a sharp chisel and then sand smooth. Turn over and drill pilot holes before nailing with cut nails, if so desired to obtain that authentic look.

Please note the doors do need to be in a normal dry living environment once they have been made up, this is also required for storage purposes, failing to do so will result in moisture being taken on and may result in your doors warping.....

WEBSITE

www.mickjonestimber.co.uk